

# ELECTRICAL GAUGES W/PEAK & WARNING

60mm DX SERIES White / Blue / Amber LED Display

## Oil Pressure Gauge

**1**

**BACK VIEW**

Power Wire Harness (Daisy Chain)

Optional Warning Light Wire Harness

Sensor Wire Harness

- Red - Battery (+)
- Black - Battery (-)
- White - Ignition Switch +12V
- Orange - Dash Lighting

**2**

The meter stand connection screw

Meter mount

Peak LED Blue

Warning LED Red

**3**

Double-Sided-Type Cord

\*Warning Light Have To Buy Extraly.

External Warning Light

Warning Light Wire Harness

**4**

+

-

**5**

1/8 NPT THREAD

**PRESS SENSOR**

**6**

Detach original element

Engine

Sensor attachment (commercially available)

Thread size 1/8NPT

Oil press Sensor

O-ring

Temperature Sensor

Engine

\*Sensor Attachment Have To Buy Extraly

**7**

**BACK VIEW**

CONNECTOR FOR SENSOR WIRE

SENSOR WIRE

BLACK CONNECTOR

**OIL PRESS SENSOR**

**8**

+

-

## Oil / Water Temperature Gauge

**1**

**BACK VIEW**

Power Wire Harness (Daisy Chain)

Optional Warning Light Wire Harness

Sensor Wire Harness

- Red - Battery (+)
- Black - Battery (-)
- White - Ignition Switch +12V
- Orange - Dash Lighting

**2**

The meter stand connection screw

Meter mount

Peak LED Blue

Warning LED Red

**3**

Double-Sided-Type Cord

\*Warning Light Have To Buy Extraly.

External Warning Light

Warning Light Wire Harness

**4**

**TEMP SENSOR**

**5**

+

-

**6**

Radiator

Upper Hose

Engine Ground

Sensor Attachment

Attach tightly with clamps. (commercially available)

Wind teflon tape. (Screw Size for sensor 1/8 NPT)

Temperature Sensor

\*Sensor Attachment Have To Buy Extraly

\*Cut the upper hose and connect the sensor attachment between hoses.

**7**

**BACK VIEW**

CONNECTOR FOR SENSOR WIRE

SENSOR WIRE

BLUE CONNECTOR

**TEMP SENSOR**

**8**

+

-

**Note: The gauge is also controlled by remote-controller (buy extraly)**

## OPERATING INSTRUCTION

**WARNING: IT IS DANGEROUS TO OPERATE THE SETTING OF THE GAUGE WHEN YOU ARE DRIVING, CONSIDERING YOUR AND OTHERS SAFETY, PLEASE OPERATE THE SETTING BEFORE DRIVING.**

### **Selectable Brightness Levels**

Three colors available: Amber / Blue / White. there have six stages of brightness level.

The DX Gauge Series selectable brightness settings for both day and night lighting modes. Below are the instructions on how to program each lighting mode.

#### **Day mode**

- Press the button located on back of the gauge to adjust backlight.
- Press the button to cycle through the 18 dimming modes.
- Once you selected your ideal setting release the button and the gauge will save your selection.

#### **Night mode**

- This mode is only available if the orange dimmer wire is connected and your headlights are powered.
- Press the button to cycle through the 18 dimming modes.
- Once you selected your ideal setting release the button and the gauge will save your selection.

### **Peak Mode**

- 1.) Hold the button for 3 seconds to enter peak mode and the "PEAK" light will come on. The pointer will rise to the highest level attained by the gauge and remain there approximately 5 seconds.
- 2.) To reset peak level: Hold the button while in peak mode ("PEAK" light is on).
- 3.) The gauge will back to normal mode after 5 seconds inactivity.

### **Warning Settlement**

Hold the button for 5 seconds until the pointer begins to blink. Push and hold the button to move across the scale or toggle button to move pointer in small increment. Once you have the pointer you want, then wait 5 seconds and pointer will stop blinking.

### **Mute Feature**

- 1.) With ignition key in off position, hold the button – Turn ignition on, wait for pointer to come to a rest then release button.
- 2.) To turn sound on – Repeat step 1.